








Installation instructions ECO SIMPLY

ECO SIMPLY PLUS

Common parts

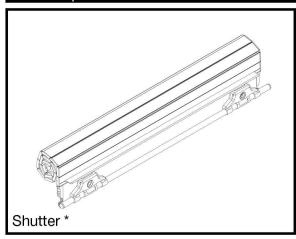


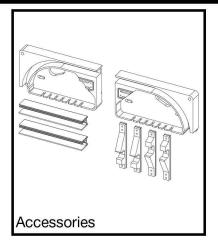


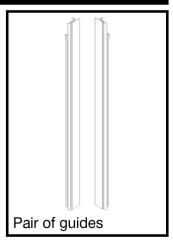



Num. Art.	Codice Code	Descrizione	Description	Q.tà Q.ty
1	70500	Terminale T5	Closing group T5	1
2	70308	Aglas inferiore per T3 e T5	Lower locking for T3 and T5	2
3	70311	Profilo di presa	Grip profile	1
4	70001.30/A 70001.38/A	Profilo serranda H30 Profilo serranda H38	Shutter profile H30 Shutter profile H38	N
5	70004	Gomma intermedia	Middle rubber for shutter profile	N
6	70002.DX.30 70002.DX.38	Pattino destro H30 Pattino destro H38	Right sliding plate H30 Right sliding plate H38	N
7	70002.SX.30 70002.SX.38	Pattino sinistro H30 Pattino sinistro H38	Left sliding plate H30 Left sliding plate H38	N
8	70311.B	Tappo per profilo di presa	Plug for grip profile	2
9	70003.MP8/A	Guida SIMPLY	Side profile SIMPLY	2
10	70005	Gomma guide di tenuta anteriore	Seal rubber	2
11	70309	Aglas superiore per T3 e T5	Upper locking for T3 and T5	2
12	70036.DX	Curva in plastica Destra - SIMPLY	Right plastic curve - SIMPLY	2
13	70036.SX	Curva in plastica Sinistra - SIMPLY	Left plastic curve - SIMPLY	2
14	70037	Prolunga tra le curve - SIMPLY	Extension between curves -SIMPLY	2
15	70038	Prolunga posteriore - SIMPLY	Back extension - SIMPLY	2
16	70020	Rullo ø45	Roll ø45	1
17	70017	Sede-supporto per rullo (DX)	Roll space	1
18	70018	Supporto perno con bronzina per rullo (SX)	Pin with bearing (L)	1
19	70011.S 70011.B	Profilo gocciolatoio PICCOLO Profilo gocciolatoio GRANDE con gomma	SMALL gutter profile BIG gutter profile with rubber	1
20	70014.S 70014.B	Profilo battuta PICCOLO Profilo battuta GRANDE	SMALL lower profile BIG gutter profile	1


^{*} ECO SIMPLY PLUS model includes a pre-charged roll.

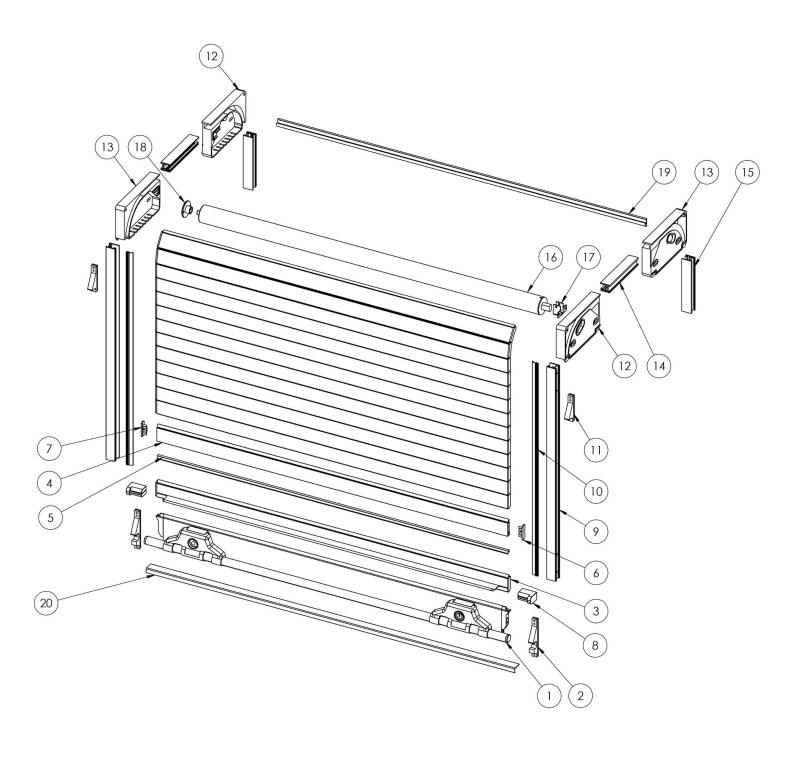

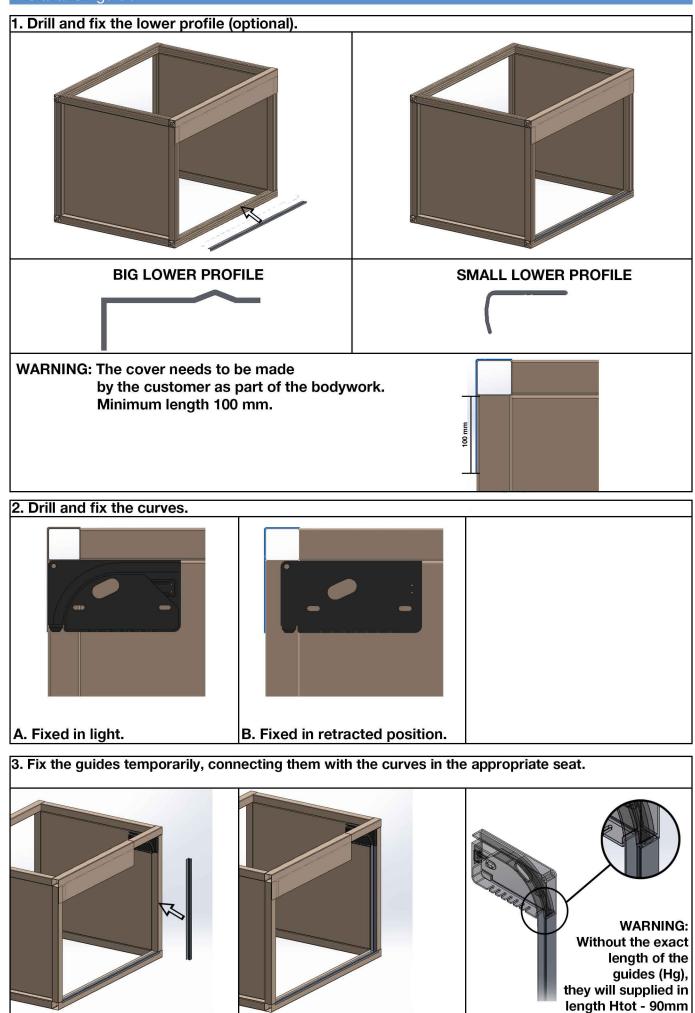

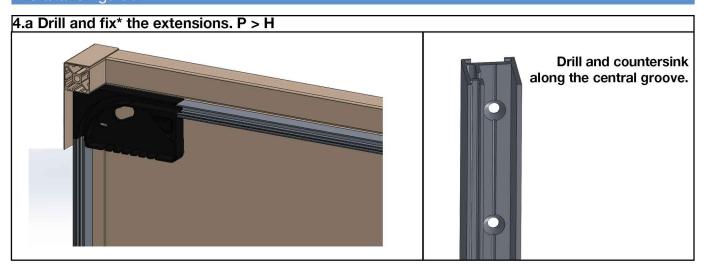


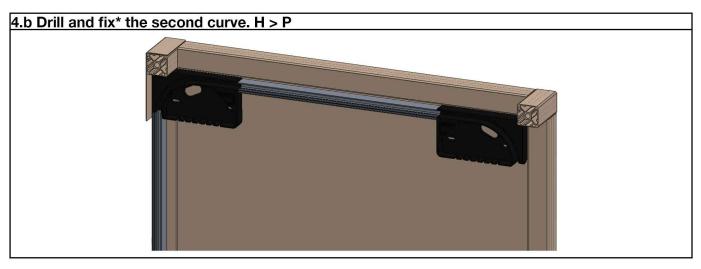


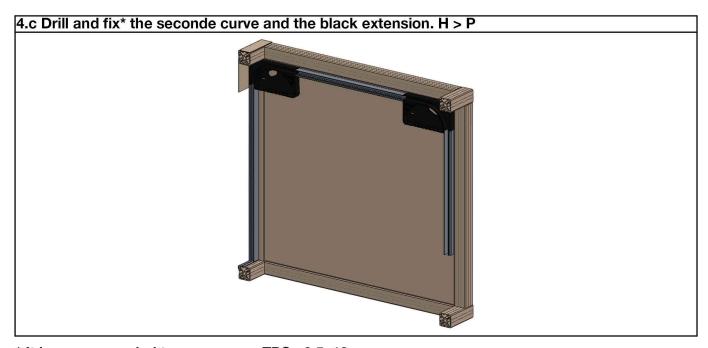


^{*} It is recommended to use screws TPS ø3.5x19

REMOVE THE GUIDES.

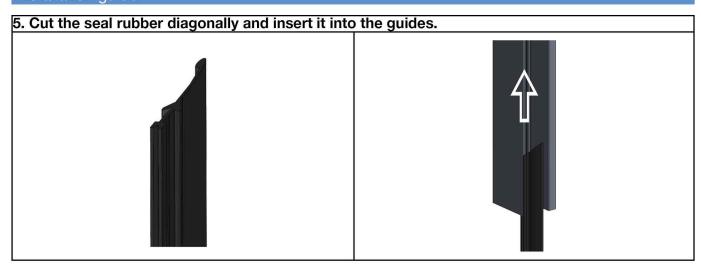

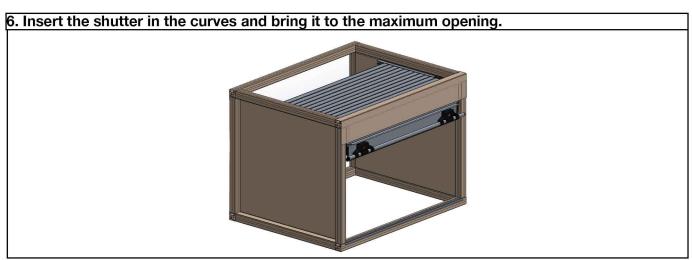


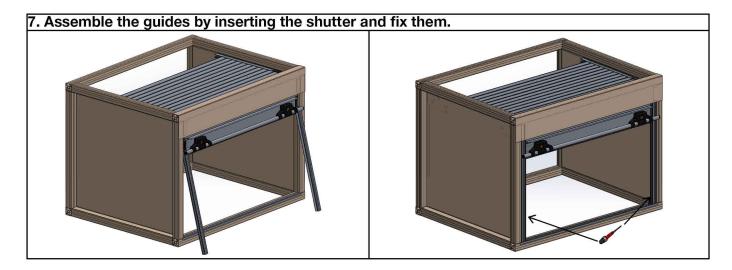


FROM STEP 8 TO 12 ONLY FOR ECO PLUS **VERSION WITH PRE CHARGED ROLL**




RIGHT SUPPORT

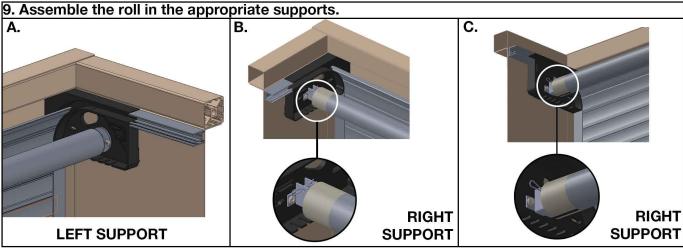


WARNING: Insert the beta pin in the right support (B); The black band on the roller must be facing downwards (C).

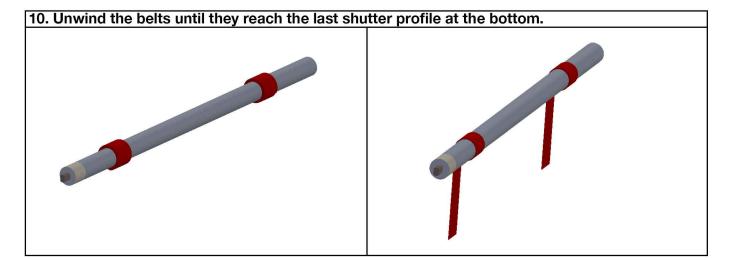


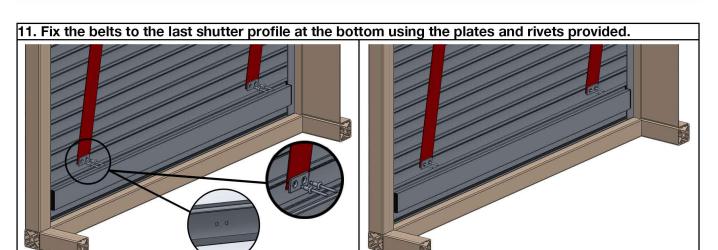

12. Remove the paper from the roll, the black band must be facing downwards.


WARNING: The safety pin will come off and the roller will be in charging position.

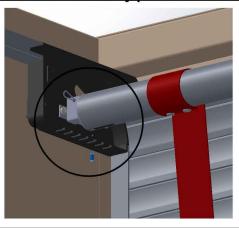


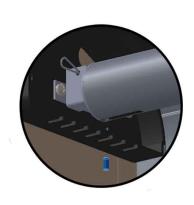



13. Hold the roller by turning it halfaway towards the inside of the compartment.


The belts will wind up and the shutter will slide all the way under the roof.

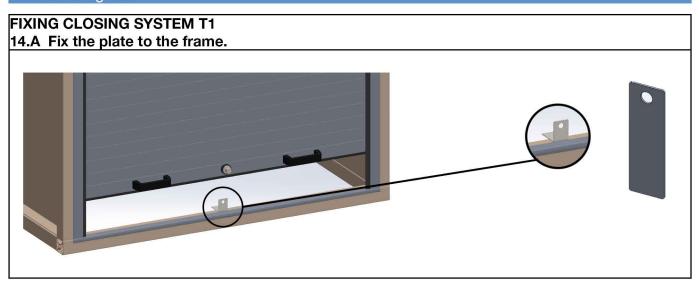


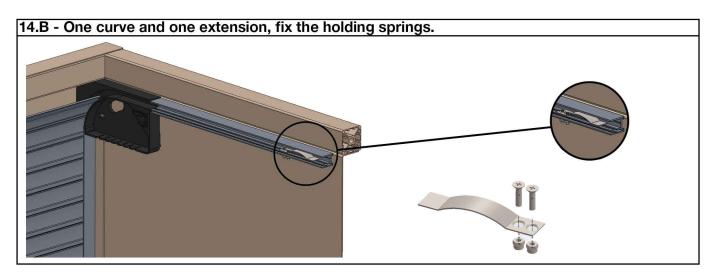

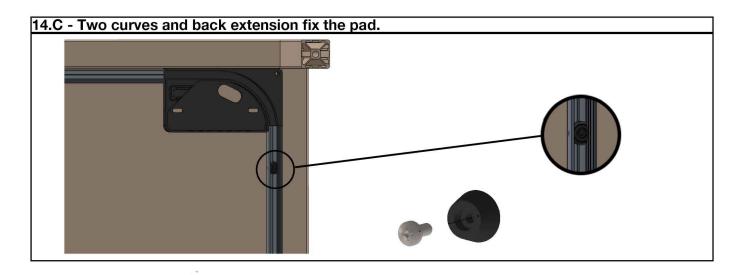


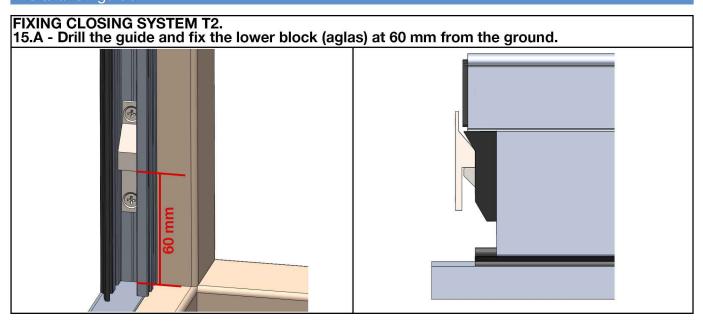


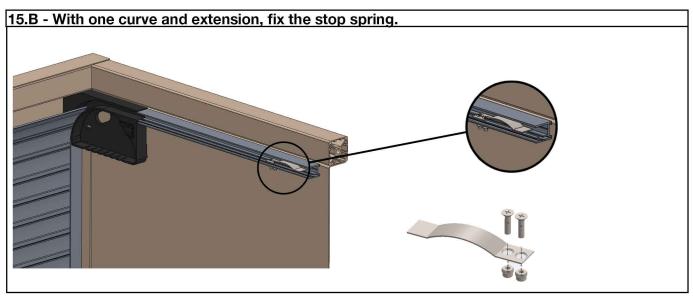

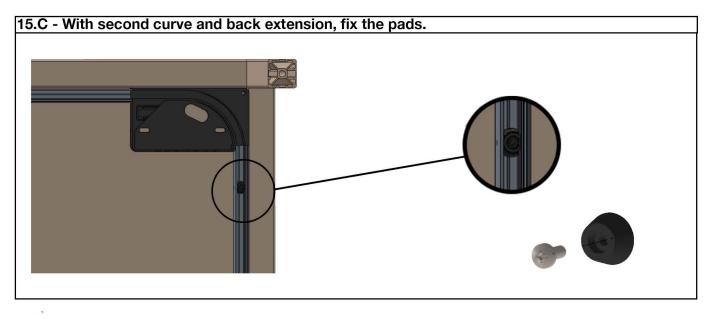



ATTENTION: If you chose the ECO PLUS SIMPLY version from step 15.A skip to step 15.D

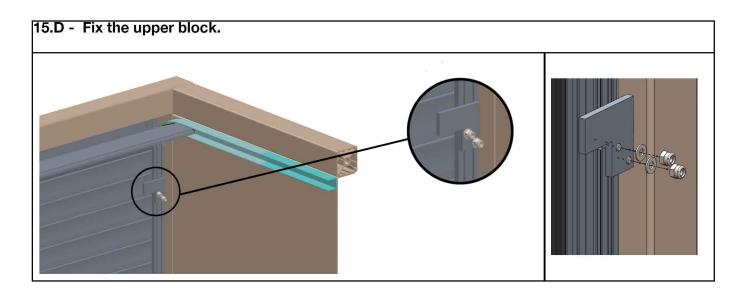

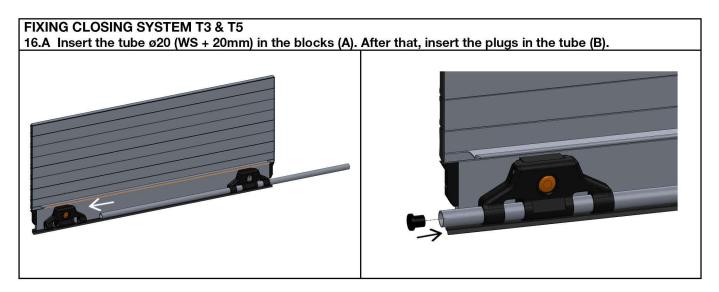



16.B - Fix the lower block (aglas).

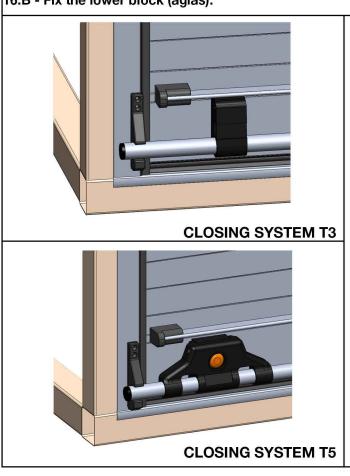

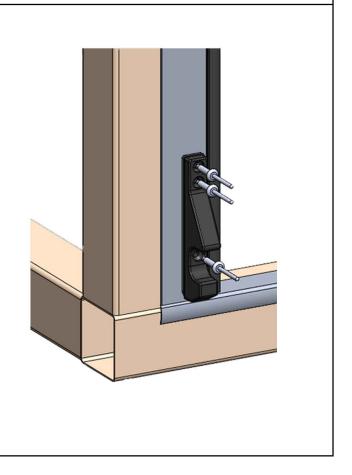


16.C - Fix the same aglas, but upside down, in the higher part of the guide bringing the shutter to the desired height.

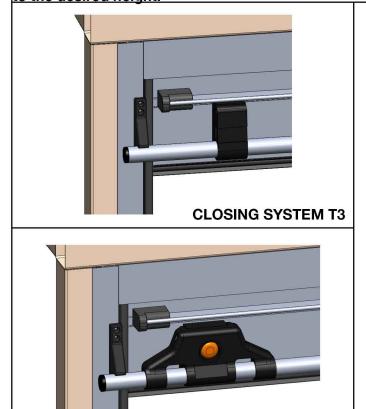

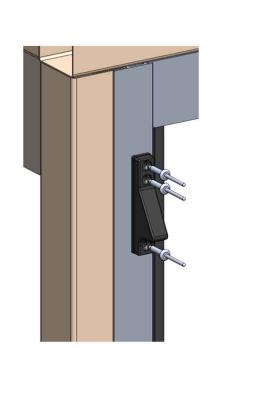

CLOSING SYSTEM T5

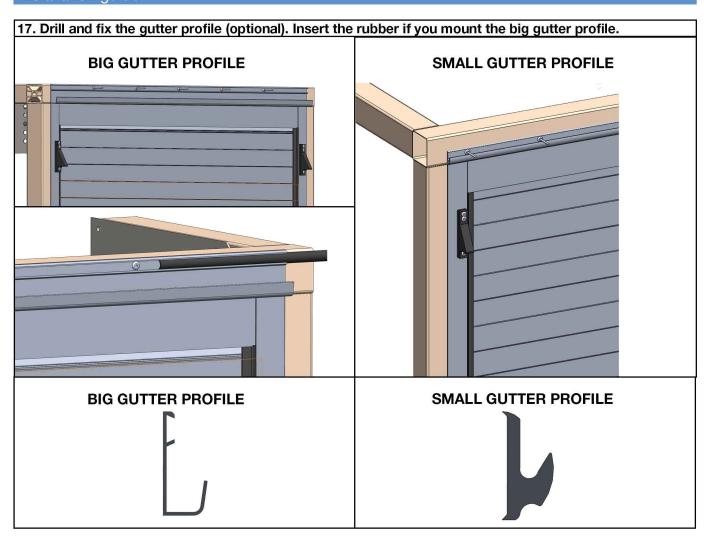

18. Drill and fix one end part of the pulling belt by the supplied screws. Holes ø4.

With the shutter open, fix the other end part of the belt to the side wall of the compartment.

