








## **Installation** instructions

# ECO ECO PLUS

#### Common parts

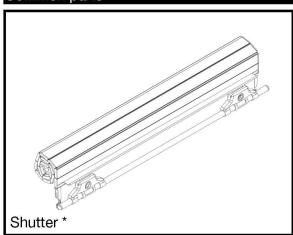

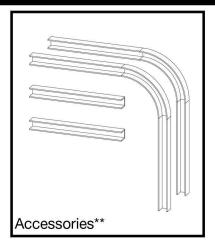

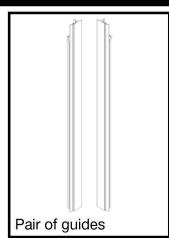



Num. Art.	Codice Code	Descrizione	Description	Q.tà Q.ty
1	70500	Terminale T5	Closing system T5	1
2	70308	Aglas inferiore per T3 e T5	Lower locking for T3 and T5	2
3	70311	Profilo di presa	Grip profile	1
4	70001.30/A	Profilo serranda H30	Shutter profile H30	Z
	70001.38/A	Profilo serranda H38	Shutter profile H38	
5	70004	Gomma intermedia	Middle rubber for shutter profile	N
6	70002.DX.30	Pattino destro H30	Right sliding plate H30	N
	70002.DX.38	Pattino destro H38	Right sliding plate H38	
7	70002.SX.30	Pattino sinistro H30	Left sliding plate H30	N
	70002.SX.38	Pattino sinistro H38	Left sliding plate H38	
8	70311.B	Tappo per profilo di presa	Plug for grip profile	2
9	70003.MP1/A	Guida MP1	Side profile MP1	2
	70003.MP2/A	Guida MP2	Side profile MP2	
	70003.MP5/A	Guida MP5	Side profile MP5	
10	70005	Gomma guide di tenuta anteriore	Seal rubber	2
11	70309	Aglas superiore per T3 e T5	Upper locking for T3 and T5	2
12	70020	Rullo ø45	Roll ø45	1
13	70017	Sede-supporto per rullo (DX)	Roll space	1
14	70018	Supporto perno con bronzina per rullo (SX)	Pin with bearing (L)	1
15	70030	Curva in alluminio	Aluminium curve	4
16	70033	Prolunga tra le curve	Extension between curves	2
17	70034	Prolunga posteriore	Back extension	2
18	70012	Angolare superiore 50x20 (copertina)	Little cover 50x20	1
19	70011.S	Profilo gocciolatoio PICCOLO	SMALL gutter profile	1
	70011.B	Profilo gocciolatoio GRANDE con gomma	BIG gutter profile with rubber	
20	70014.S	Profilo battuta PICCOLO	SMALL lower profile	1
	70014.B	Profilo battuta GRANDE	BIG gutter profile	
21	70042	Cinghia per rullo	Belt for roll	2
22	70043	Piastrina per cinghia	Plate for roller belt	2


<sup>\*</sup> ECO PLUS model includes a pre-charged roll.


<sup>\*\*</sup> Extensions and back curves supplied according to depth of the compartment.


<sup>\*\*\*</sup> Belts for roll (pos. 21) and plates for roller belt (pos. 22) are supplied only with ECO PLUS model.

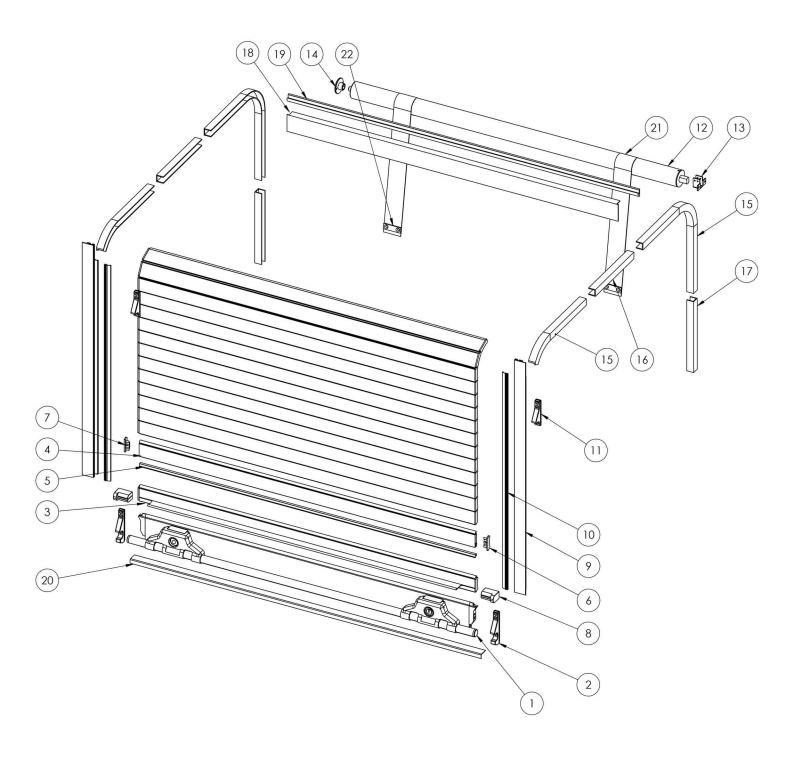


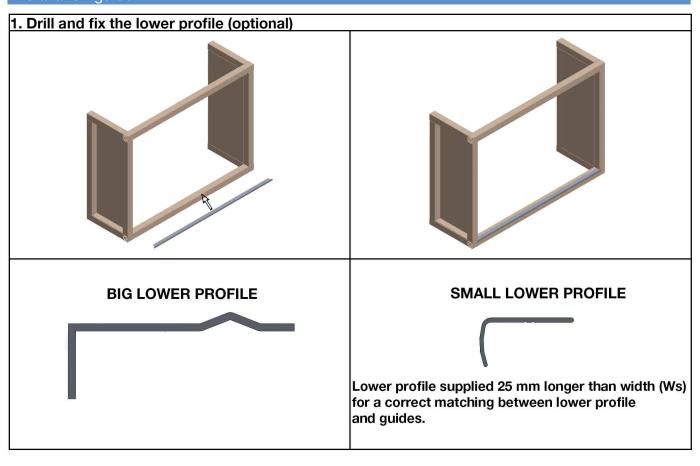


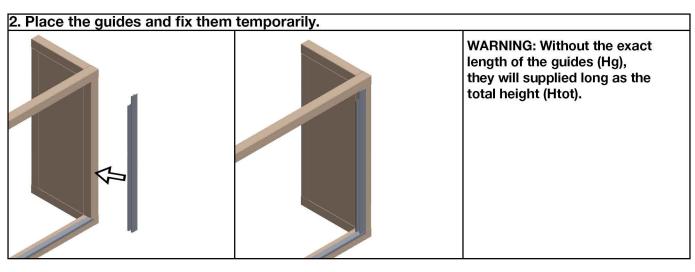


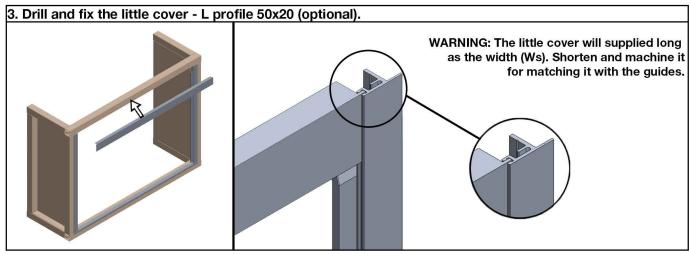


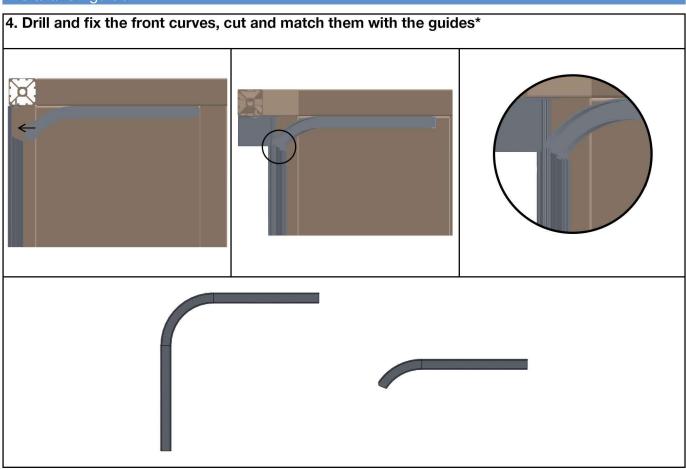

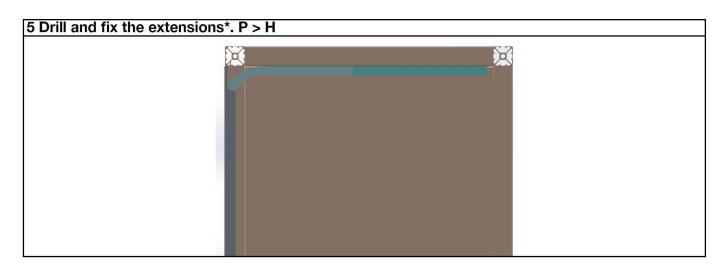

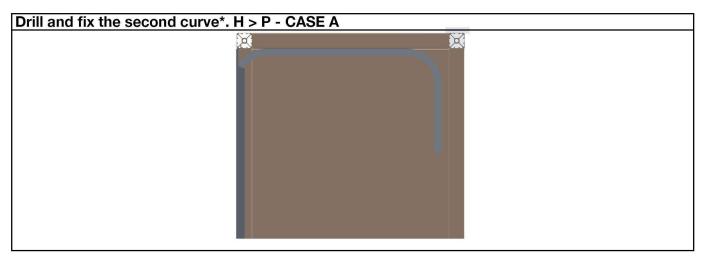


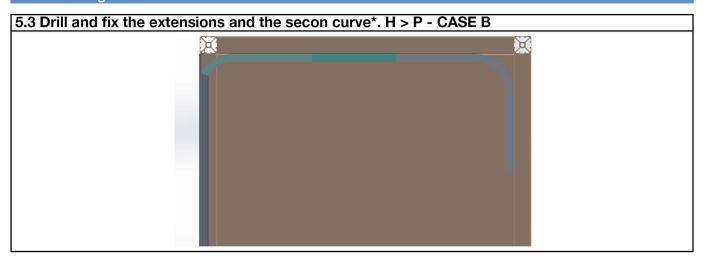

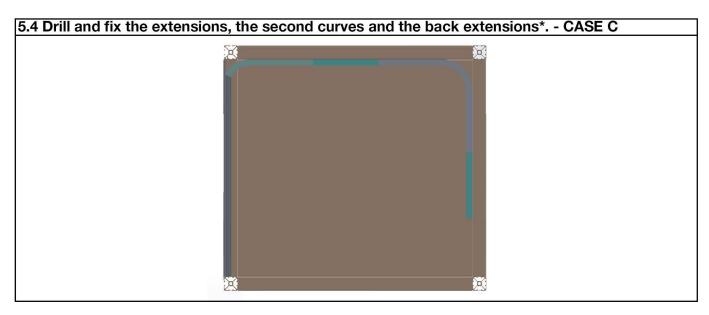


<sup>\*</sup>It is highly recommended to use screws TPS ø3.5 x 19


6. Mark on the guide the intersection point between the guide and the little cover - L profile 50x20 The mark will help you to know the correct measure of the seal rubber.

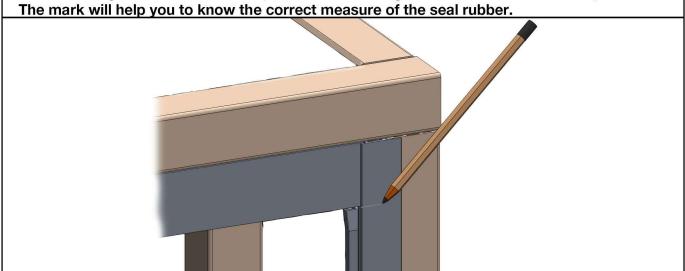


7. Cut the seal rubber diagonally and insert it in the guides,a fter that cut to measure considering the mark made before (step 6).

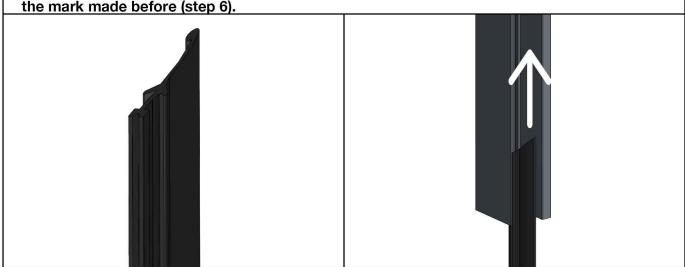

8. If you chose the T2 closing system and/or, as optional, the LED the microswitch, the pulling belt, insert the bolts as the following figure.

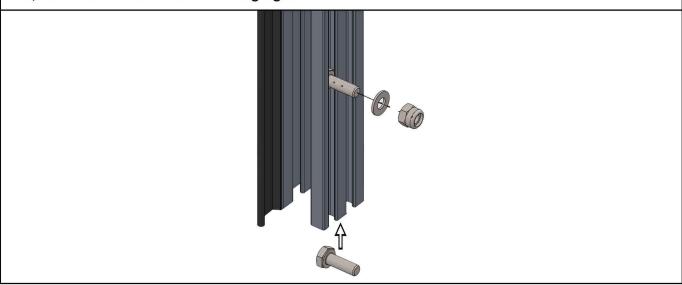


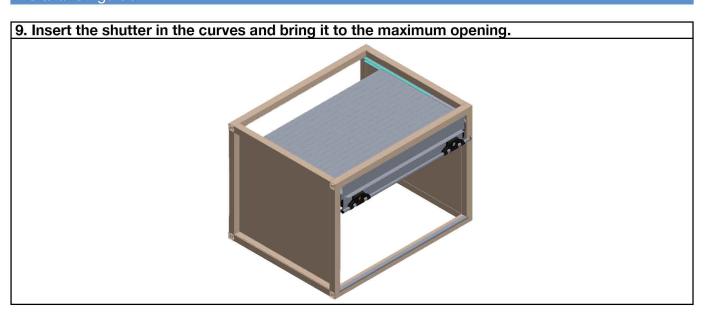





<sup>\*</sup> It is highly recommended to use screws TPS ø3.5 x 19.


### FROM STEP 11 TO 15 ONLY FOR ECO PLUS VERSION WITH THE PRE CHARGED ROLLER

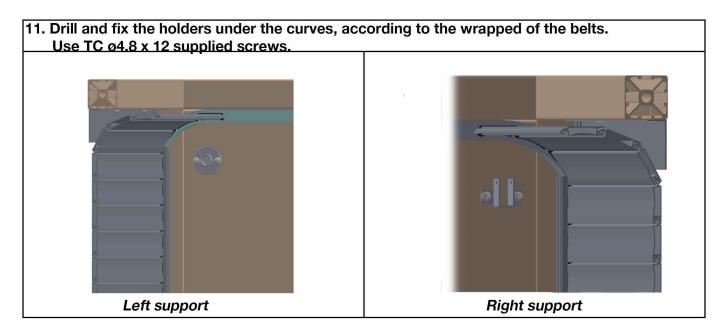

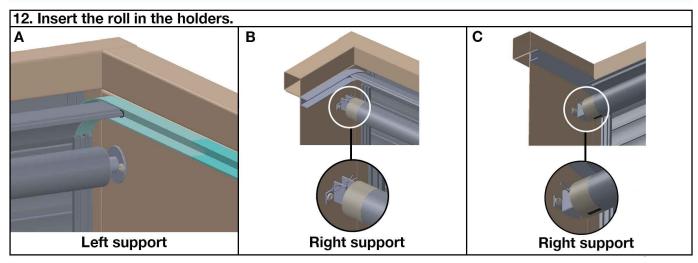


WARNING: Insert the betea pin in the right support (B); The black band must be downwards (C).

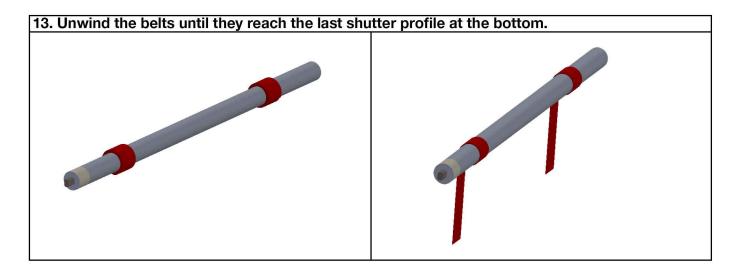

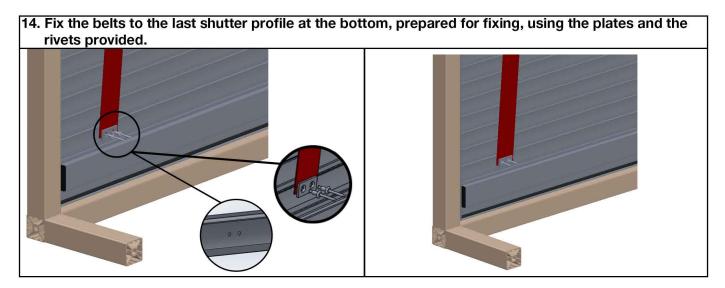



15. Remove the paper from the roll, the black band must be facing downwards.


WARNING: The safety pin will come off and the roller will be in the charging position.

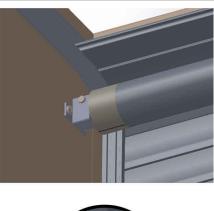





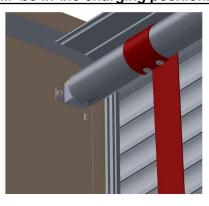


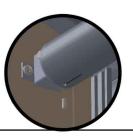


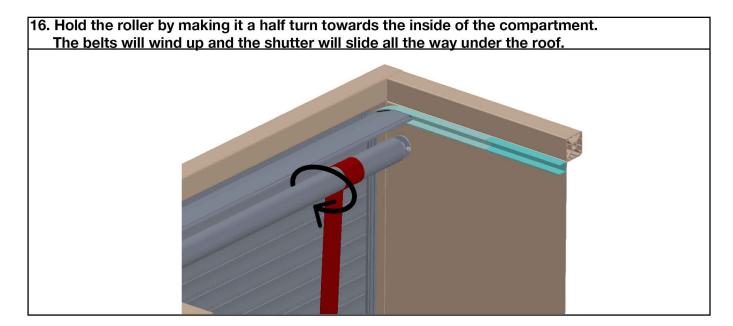

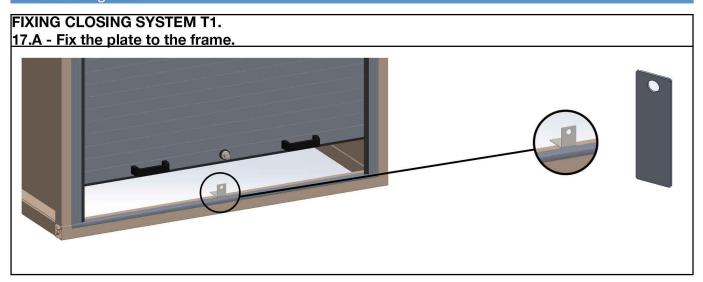


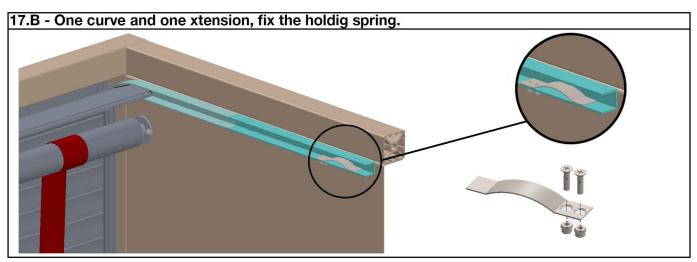


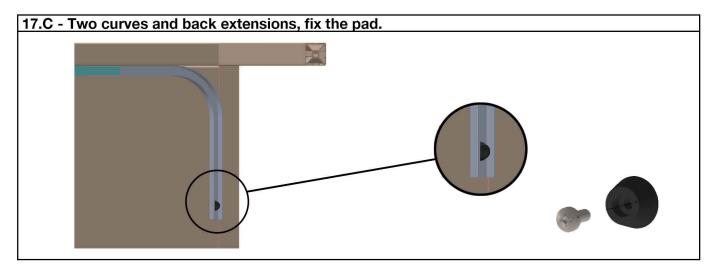

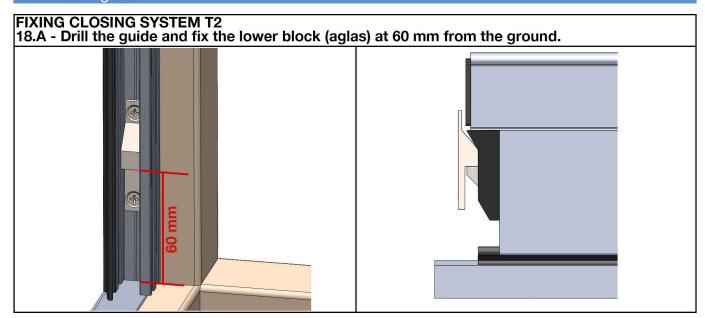


#### IN CASE OF ECO MODEL

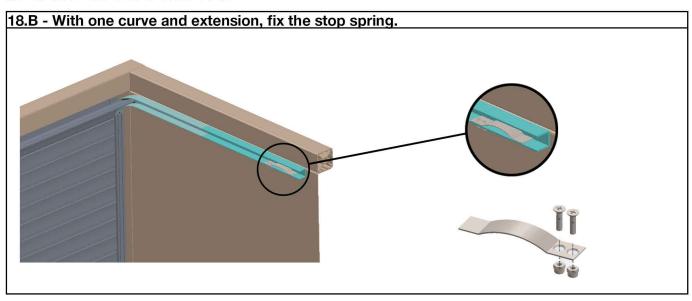

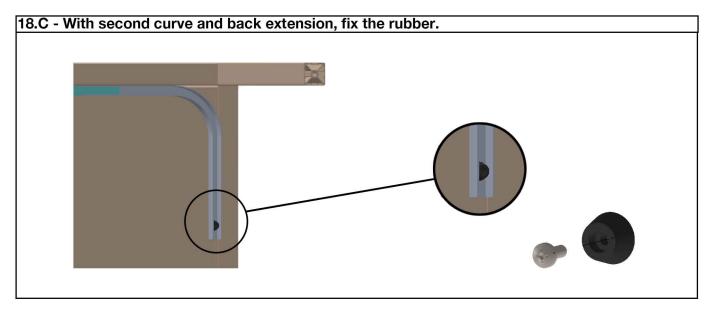



#### IN CASO OF ECO PLUS MODEL

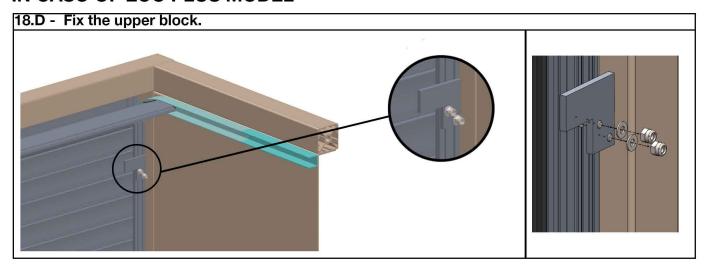


FIXING CLOSING SYSTEM T3 e T5.


19.A Insert the tube  $\emptyset$ 20 (Ws + 20 mm) in the blocks (A). After that, insert the plugs in the tube (B).

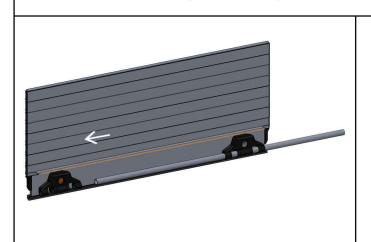

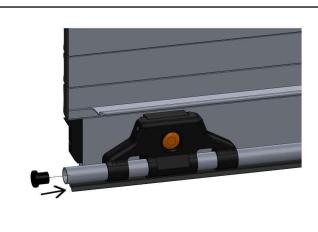


#### 19.B - Fix the lower block (aglas)

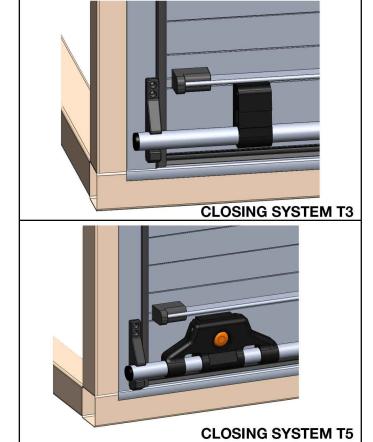


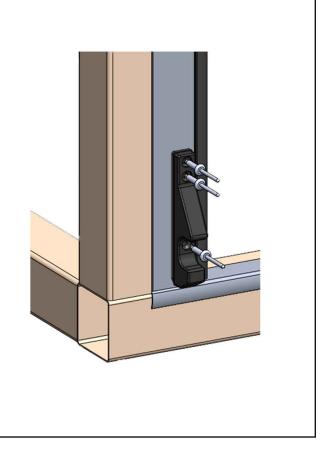

#### **ECO**


19.C - Fix the same aglas, but upside down, in the higher part of the guide bringing the shutter to the desired height.

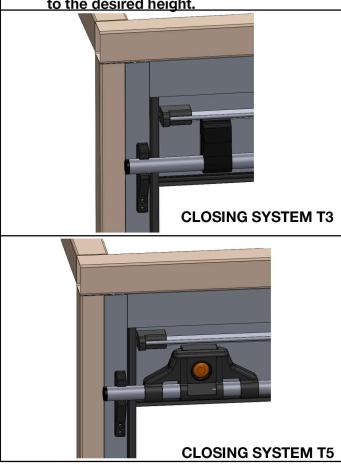


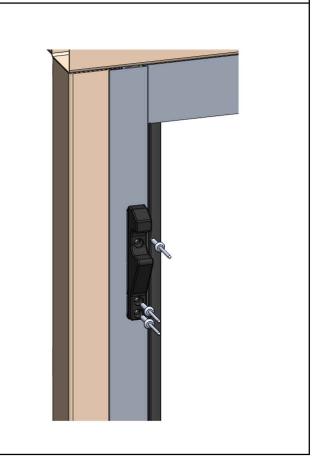



#### **ECO PLUS**

19.D - With Eco Plus model, fix the upper aglas in the higher part of the guide, bringing the shutter to the desired height.

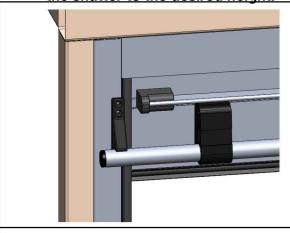

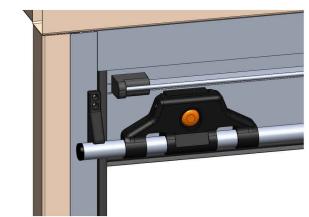

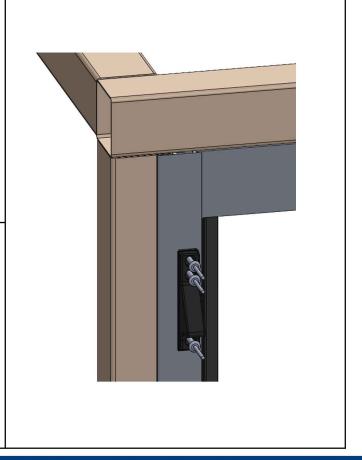

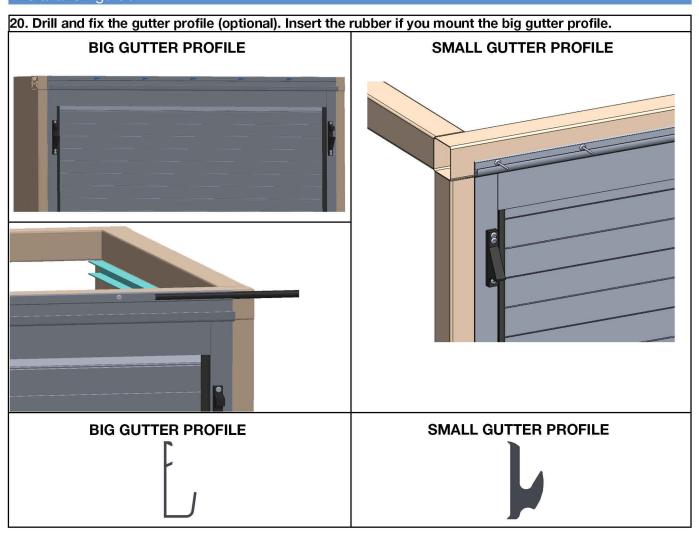

#### **ONLY FOR ECO PLUS MODEL**

21. Drill and fix one end part of the pulling belt by the supplied screws. Hole ø4.

With the shutter open, fix the other end part of the beltto the side wall of the compartment.

